myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY HDR-XR160. You'll find the answers to all your questions on the SONY HDR-XR160 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SONY HDR-XR160
User guide SONY HDR-XR160
Operating instructions SONY HDR-XR160
Instructions for use SONY HDR-XR160
Instruction manual SONY HDR-XR160

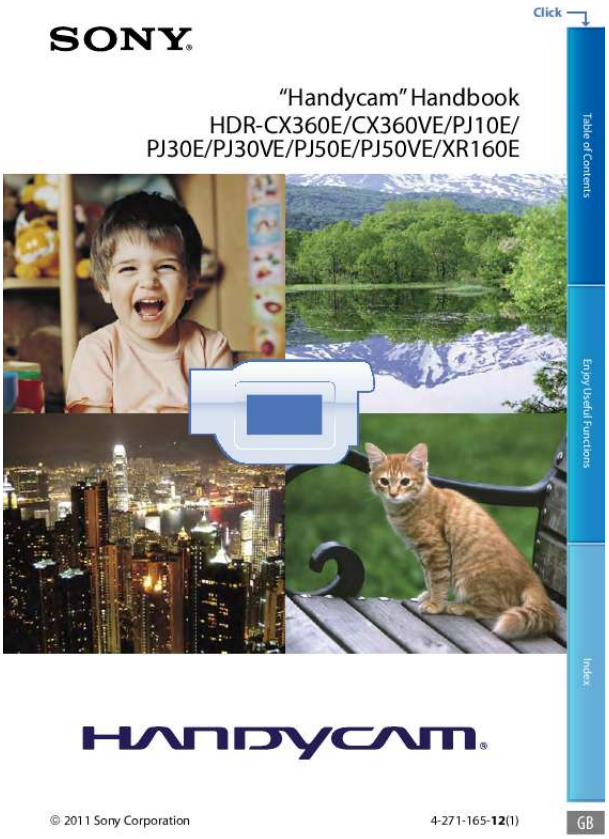

Your user manual
SONY HDR-XR160

Manual abstract:

To view your recordings on a TV, you need a PAL system-based TV. Television programs, films, video tapes, and other materials may be copyrighted. Unauthorized recording of such materials may be contrary to the copyright laws. Use the camcorder in accordance with local regulations. DVD media recorded with high definition image quality (HD) can be played back with devices that are compatible with the AVCHD standard. You cannot play discs recorded with high definition image quality (HD) with DVD players/recorders as they are not compatible with the AVCHD format. If you insert a disc recorded with the AVCHD format (high definition image quality (HD)) into a DVD player/recorder, you may not be able to eject the disc. Save all your recorded image data To prevent your image data from being lost, save all your recorded images on external media periodically. To save images on your computer, see page 56, and to save images on external devices, see page 62. The type of discs or media on which the images REC Mode] can be saved depend on the [selected when the images were recorded.

] can Movies recorded with [50p Quality be saved using external media (p. 64). Movies] can be recorded with [Highest Quality saved on external media or on Blu-ray discs (p. 61, 64). Enjoy Useful Functions Notes on battery pack/AC Adaptor Be sure to remove the battery pack or the AC Adaptor after turning off the camcorder.

Disconnect the AC Adaptor from the camcorder, holding both the camcorder and the DC plug. Notes on playing back You may not be able to play back normally images recorded on your camcorder with other devices. Also, you may not be able to play back images recorded on other devices with your camcorder. Standard (STD) image quality movies recorded on SD memory cards cannot be played on AV equipment of other manufacturers. Note on the camcorder/battery pack temperature Index When the temperature of the camcorder or battery pack becomes extremely high or extremely low, you may not be able to record or play back on the camcorder, due to the protection features of the camcorder being activated in such situations.

In this case, an indicator appears on the LCD screen (p. 107). GB When the camcoder is connected to a computer or accessories Do not try to format the recording media of the camcorder using a computer. If you do so, your camcorder may not operate correctly. When connecting the camcorder to another device with communication cables, be sure to insert the connector plug in the correct way. Pushing the plug forcibly into the terminal will damage the terminal and may result in a malfunction of the camcorder. When the camcorder is connected to other devices through a USB connection and the power of the camcorder is turned on, do not close the LCD panel. The image data that has been recorded may be lost. In this manual, the internal memory (HDR-CX360E/CX360VE/PJ10E/PJ30E/ PJ30VE) and the hard disk (HDR-PJ50E/ PJ50VE/XR160E) of the camcorder and the memory card are called "recording media." In this manual, the DVD disc recorded with high definition image quality (HD) is called AVCHD recording disc.

Design and specifications of your camcorder and accessories are subject to change without notice. The HDR-PJ30VE is used for illustrations in this book, except where model-specific descriptions are provided. Table of Contents Confirm the model name of your camcorder If you cannot record/play back images, perform [Format] If you repeat recording/deleting images for a long time, fragmentation of data occurs on the recording media. Images cannot be saved or recorded. In such a case, save your images on some type of external media first, and then perform [Format] by touching (MENU) [Setup] [(Media Settings)] [Format] the desired medium . The model name is shown in this manual when there is a difference in specification between models. Confirm the model name on the bottom of your camcorder. The main differences in specification of this series are as follows..

Your user manual
SONY HDR-XR160